
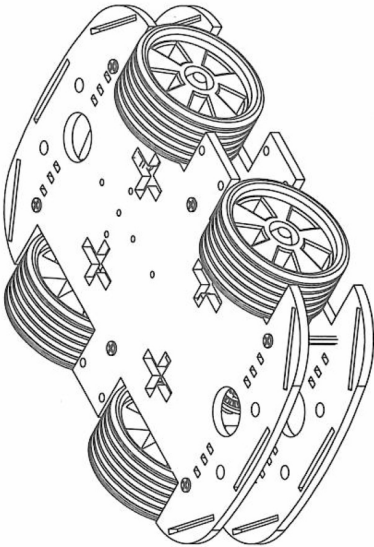
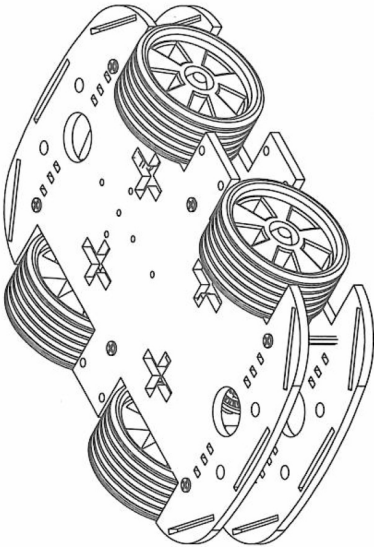
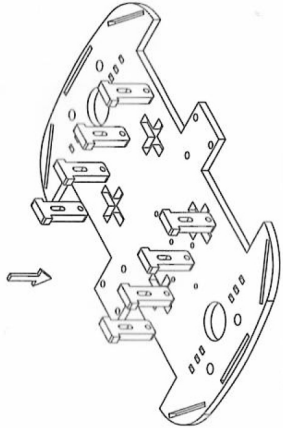
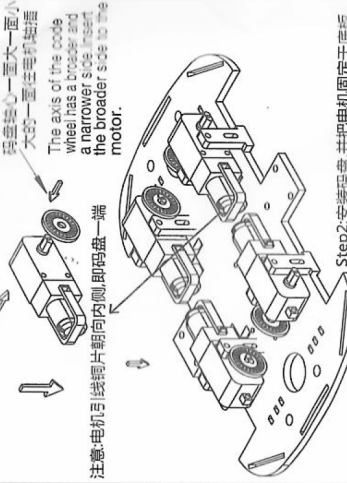
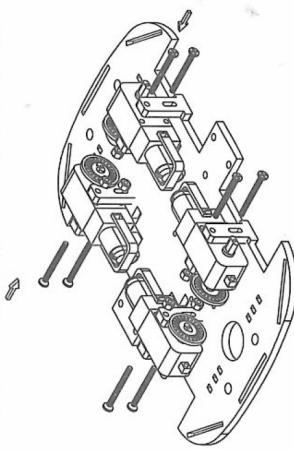
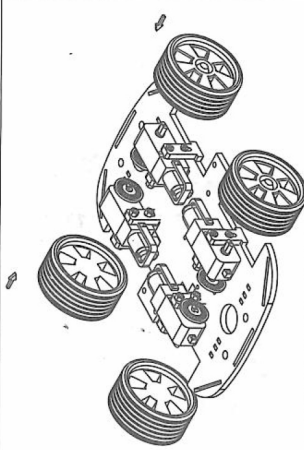
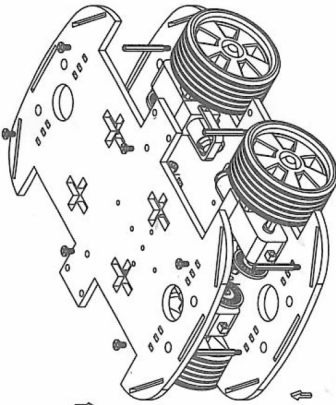
	底盘 2片 Chassis 2 PCS		轮子 4个 Wheel 4 PCS
	测速码盘 4片 Velocimetry code wheel 4 PCS		 扫描二维码下载小车资料 密码: e8rb
	M3*30螺丝 8支 M3*30 Screw 8PCS		紧固件 8片 Fastener 8PCS
	M3*6螺丝 6支 M3*6 Screw 6PCS		M3螺母 14支 M3 nut 14PCS
			
		L30+6铜柱 6只 L30+6 Spacer 6PCS	
			
效果图 Effect after installation			

	
Step1: 先把小车底板、紧固件、码盘的黄色保护纸撕掉, 然后把紧固件插入小车底板 Step1: Insert the fastener into the chassis after tearing off the yellow protection wrap of the chassis, the fastener and the code wheel.	Step2: 安装码盘, 并把电机固定于底板 (Attention: the copper sheet of the leading wire of motor should face inside, the same side of encoder)
	
Step3: 插入螺丝, 把电机固定到小车底板, 并拧上螺帽 Step3: Fix the motor to the chassis, then insert and tighten the screws.	Step4: 手握住电机(保护紧固件), 并在里面插入轮子 Step4: Hold tight and insert the motor (protection fastener) to the wheel.
	
Step5: 放入铜柱下面上螺帽, 上面上螺丝固定上下板, 并插入轮子, 安装完成 Step5: Insert the spacer, insert the screws from the downside and tighten them from the upper side. Installation completed.	